



Your Original Manufacturer & Authorized Provider of Parts & Serices for all 1984-2012 Electrolux

IR LAMP

LAMPADE IR

Electrolux heating elements

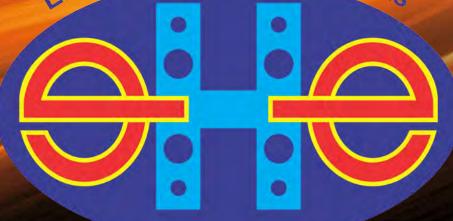

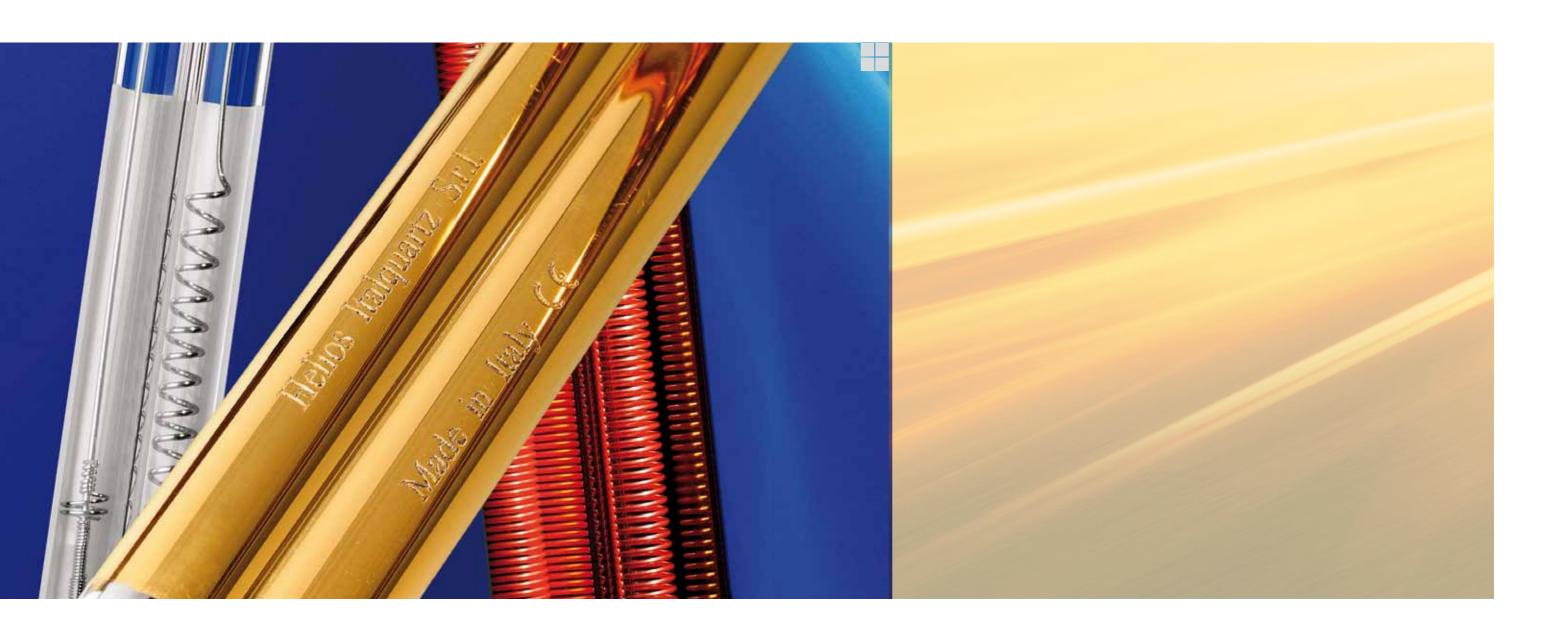




HEATING BY RADIATION

Radiation, compared to convection and conduction, is the most powerful and efficient way of heating a material. In fact radiation does not need to come into a direct contact with the surfaces of the products to be heated up and does not require the presence of any intermediary agent such as air.

Radiation operates with the transmission of energy through electromagnetic rays emitted by a heating element. The heating performance is influenced by the following peculiarity: heating element temperature, heated body capacity to absorb radiant heat, shape, position and distance between the heated body and the heating source.

As illustrated in the following picture, the wavelengths of infrared ("IR") are placed in the range of the electromagnetic spectrum from 750 nm to 1 mm, between the red zone of the visible spectrum and the microwaves.

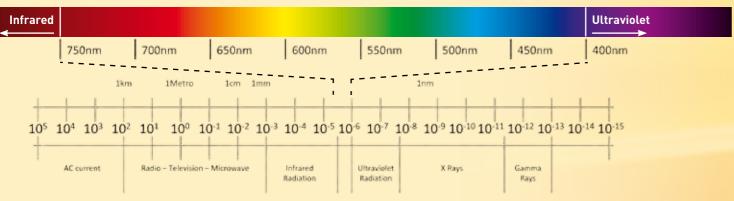


In particular, the infrared wavelengths range generated by the IR quartz emitters, are located in the range of 3,5 μ m (medium wave) and 0,9 μ m (short wave).

Depending on the type of material to be heated it is possible to use different types of IR wavelengths to reach the maximum propagation of energy and to obtain a faster and more efficient heating process.

The IR heaters, if compared with traditional heating systems that use the hot air, emit more energy for unit surface and this energy could be focused, concentrated, directed and reflected just like the light.


The use of this technology can give enormous benefits in order of:


- SPEED HEATING PROCESS: IR quartz emitters need short time to switch on and switch off (few seconds); this fact reduces the time of operation and optimizes the homogeneity of the heating up of the material;
- ENERGY SAVING AND LESS HEAT GENERATION IN THE SURROUNDING AREA: due to the
 fast switch on of the IR emitters, it is possible to start them and concentrate the heat only
 where and when it is really necessary;
- EASY CONTROL OF THE EMITTERS: the emitters can be controlled by wave modulators or they can work in simply ON/OFF way;
- ABSENCE OF DIRECT CONTACT WITH THE MATERIAL AND NO SURROUNDING AREA CONTAMINATION: working by the radiation, IR emitters do not need to be in contact with the material to be heated;
- SMALLER SIZES AND DIMENSIONS OF IR QUARTZ HEATING MODULES AND OVENS RESPECT OF TRADITIONAL HOT AIR HEATING EQUIPMENTS: the small dimension of the IR quartz emitters and their convenient shape simplify the machinery construction design and the maintenance process of the heating area.

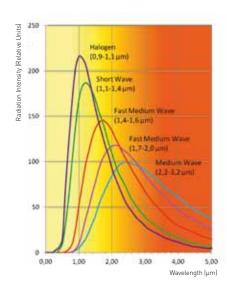


The picture on the left shows all the radiation intensity curves for halogen, short wave, medium and fast medium wave emitters.

The graphs on the right represent the absorption spectrum of the IR radiation, for water, polyethylene and PVC. In all of these three cases there is a considerable absorption peak of the IR radiation between 2,5 and 3,5 μm , for this reason the more effective IR quartz technology to be used for the heating process of above mentioned materials are the medium wave emitters compared with the short wave and halogen lamps.

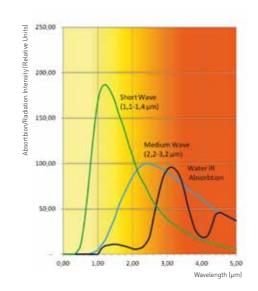

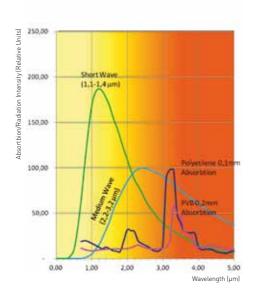



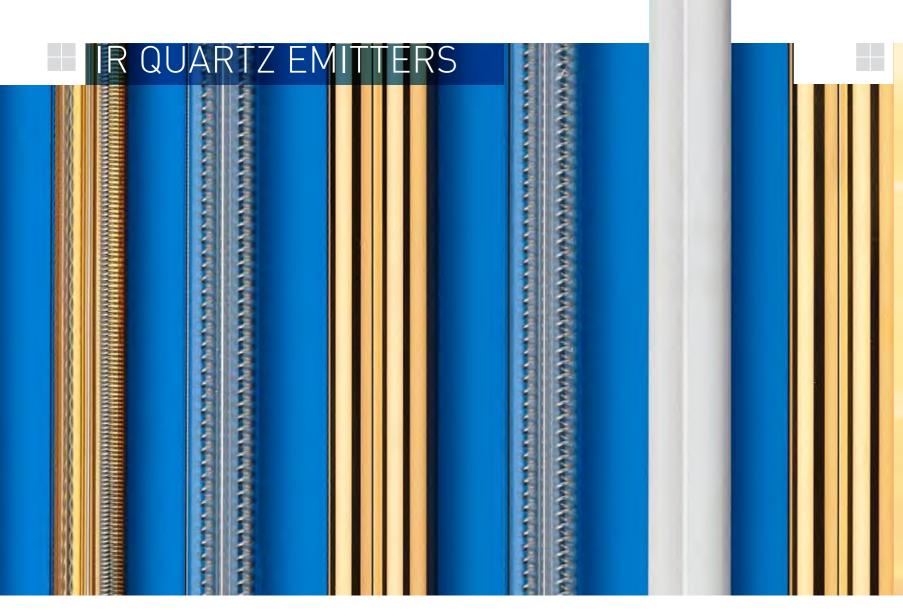

REFLECTORS

To better convey and focus on the material all the energy emitted by the lamp, it is possible to apply a special reflector directly on the quartz tube.


The reflectors usually applied by Helios Italquartz on its emitters are the following:

- 1. GOLD REFLECTOR is a gold layer, fixed directly on the quartz tube. It's able to reflect more than 90% of IR radiation and if properly cooled it can reach the working temperature of about 600°C;
- 2. WHITE REFLECTOR is a with ceramic layer, fixed directly on the quartz tube. It's able to reflect about the 70% of IR radiation, so it is less effective compared to the gold one, but it can resist up to a working temperature of about 900 - 1000°C;
- 3. RUBY REFLECTOR is used to mitigate the IR radiation intensity of the filament. It is usually fixed all over the quartz tube in combination with another reflector;

The use of a coating reflectors on the quartz emitter tube has many advantages in term of improved energy transferred on the material, with the result of a faster heating process. Through the appropriate reciprocal positioning of the emitters inside the machinery and their distance from the product to be heated it is possible to obtain an additional increase of the irradiated energy.



Material to be heated



Material to be heated

Helios Italquartz IR quartz emitters are made by a quartz tube with a filament inside.

The choice of quartz glass is not casual, in fact this extraordinary material is totally transparent at IR radiation, can stand constant working temperature of more than 1000°C and it is chemical agents resistant.

Helios Italquartz uses two kinds of quartz tubes to host the filament: single tube and twin tube.

The twin tube permits a best mechanical resistance, thanks to its reverse "H" shape, and it allows to manufacture emitters up to 6,5 meters in length.

In the table aside there are represented the standard section sizes and maximum lengths of Helios Italquartz IR emitters, both for single and twin quartz tube.





| section a x b (mm) | Maximum Length L (mm) | |
|--------------------------|-----------------------------|--|
| 18 x 9 | 1000 | |
| 22 x 10 | 2500 | |
| 33 x16 | 6500 | |
| 18 x 8 | 1000 | |
| 22 x 11 | 2500 | |
| 33 x 15 | 6500 | |



| Outer diameter D (mm) | Maximum Length L (mm) |
|-----------------------------|-----------------------------|
| 10 | 1100 |
| 12 | 1500 |
| 13 | 2000 |
| 16 | 2500 |
| 18 | 3500 |
| 26 | > 4000 |

In the following graphs are represented the distribution of the irradiation of the IR single and twin tube emitters (green line) compared to the irradiation of the same emitters provided with gold reflectors (orange line).

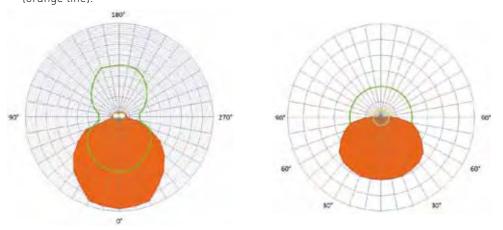

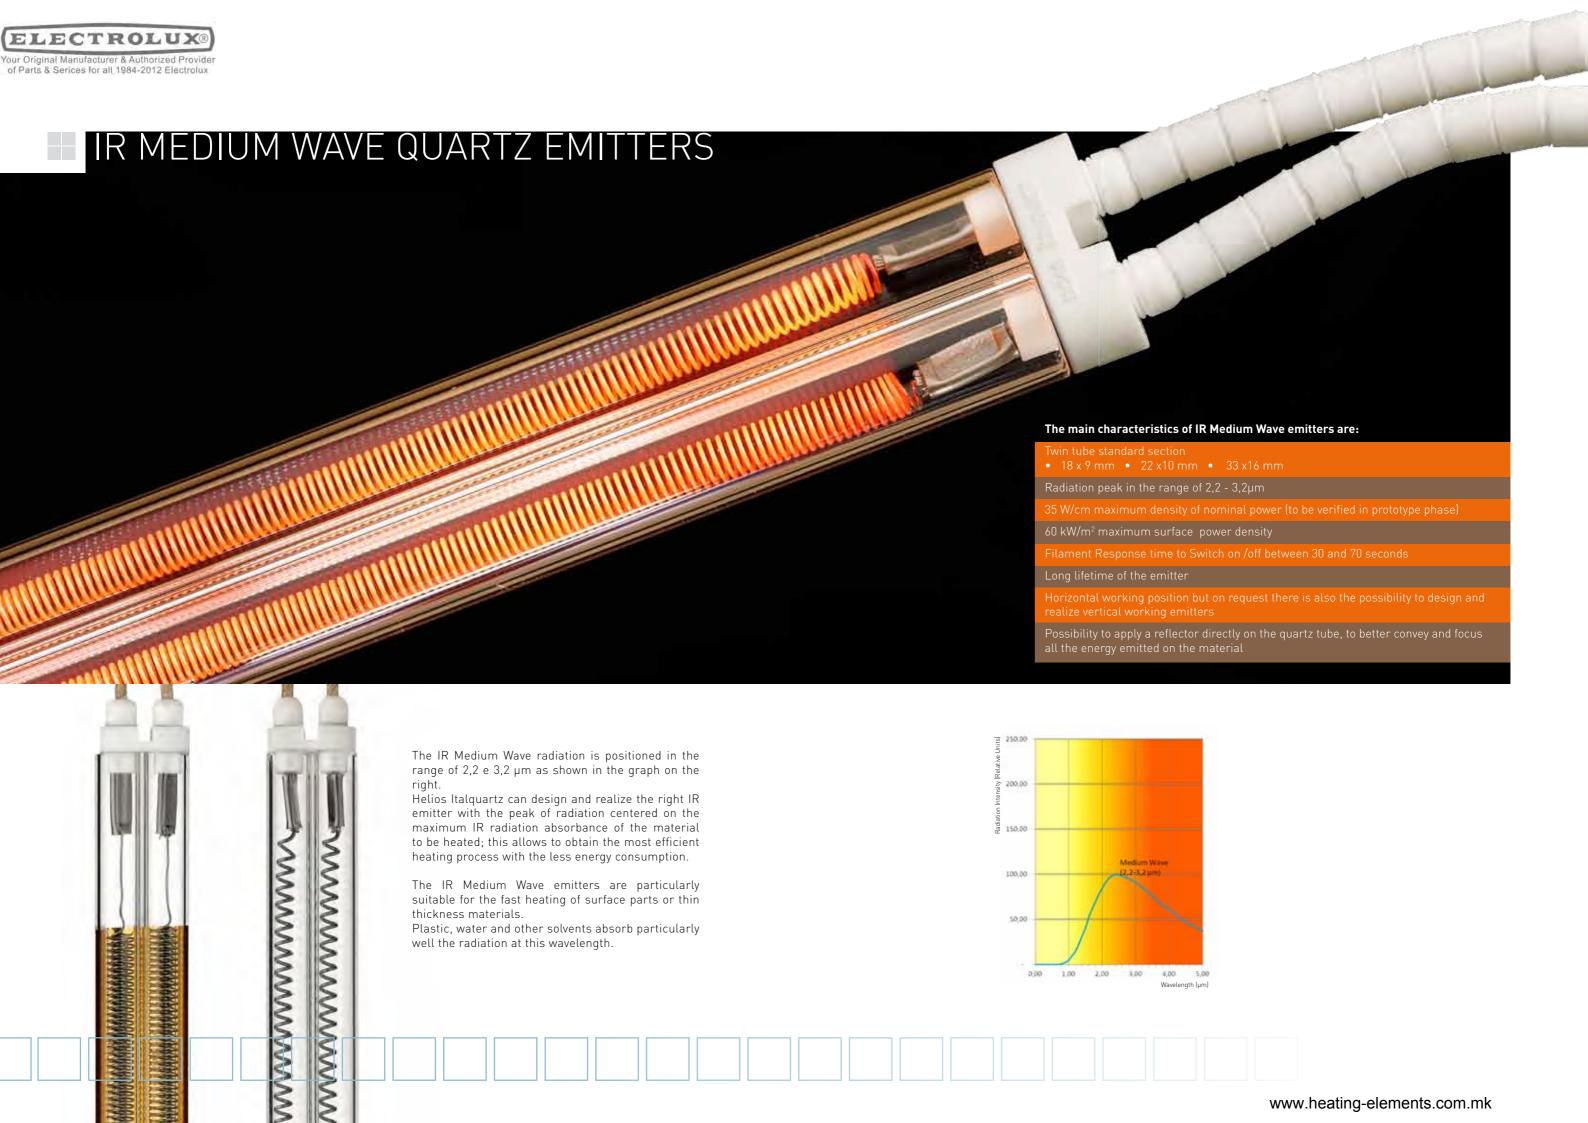







IR Medium Wave Single tube emitter although technologically outdated by the twin tubes emitters in some circumstances are considered still very useful, efficient and reliable thanks to the easier installation and lower production cost.

Helios Italquartz, thanks to its long track record and wide set of products always in stock, can advice the customer choosing the right emitters for the specific application. Furthermore the Technical Department can also design the emitter based on the customer's specific technical instructions:

- total length of the emitter
- length of the heating part
- filament and ending configuration
- power
- voltage









The IR Fast Medium Wave radiation is positioned in the range of 1,4 e 1,6 μm as shown in the graph on the right.


Helios Italquartz can design and realize the right IR emitter with the peak of radiation centered on the maximum absorption of the IR radiation of the material to be heated; this allows to obtain the most efficient heating process with the less energy consumption.

The IR Fast Medium Wave emitter, is the optimal compromise when one specific application requires at the same time the IR radiation of the Medium Wave emitters and the fast response time in the switching on/off proper of the Short Wave emitters .

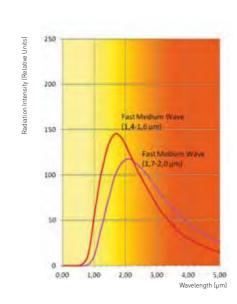



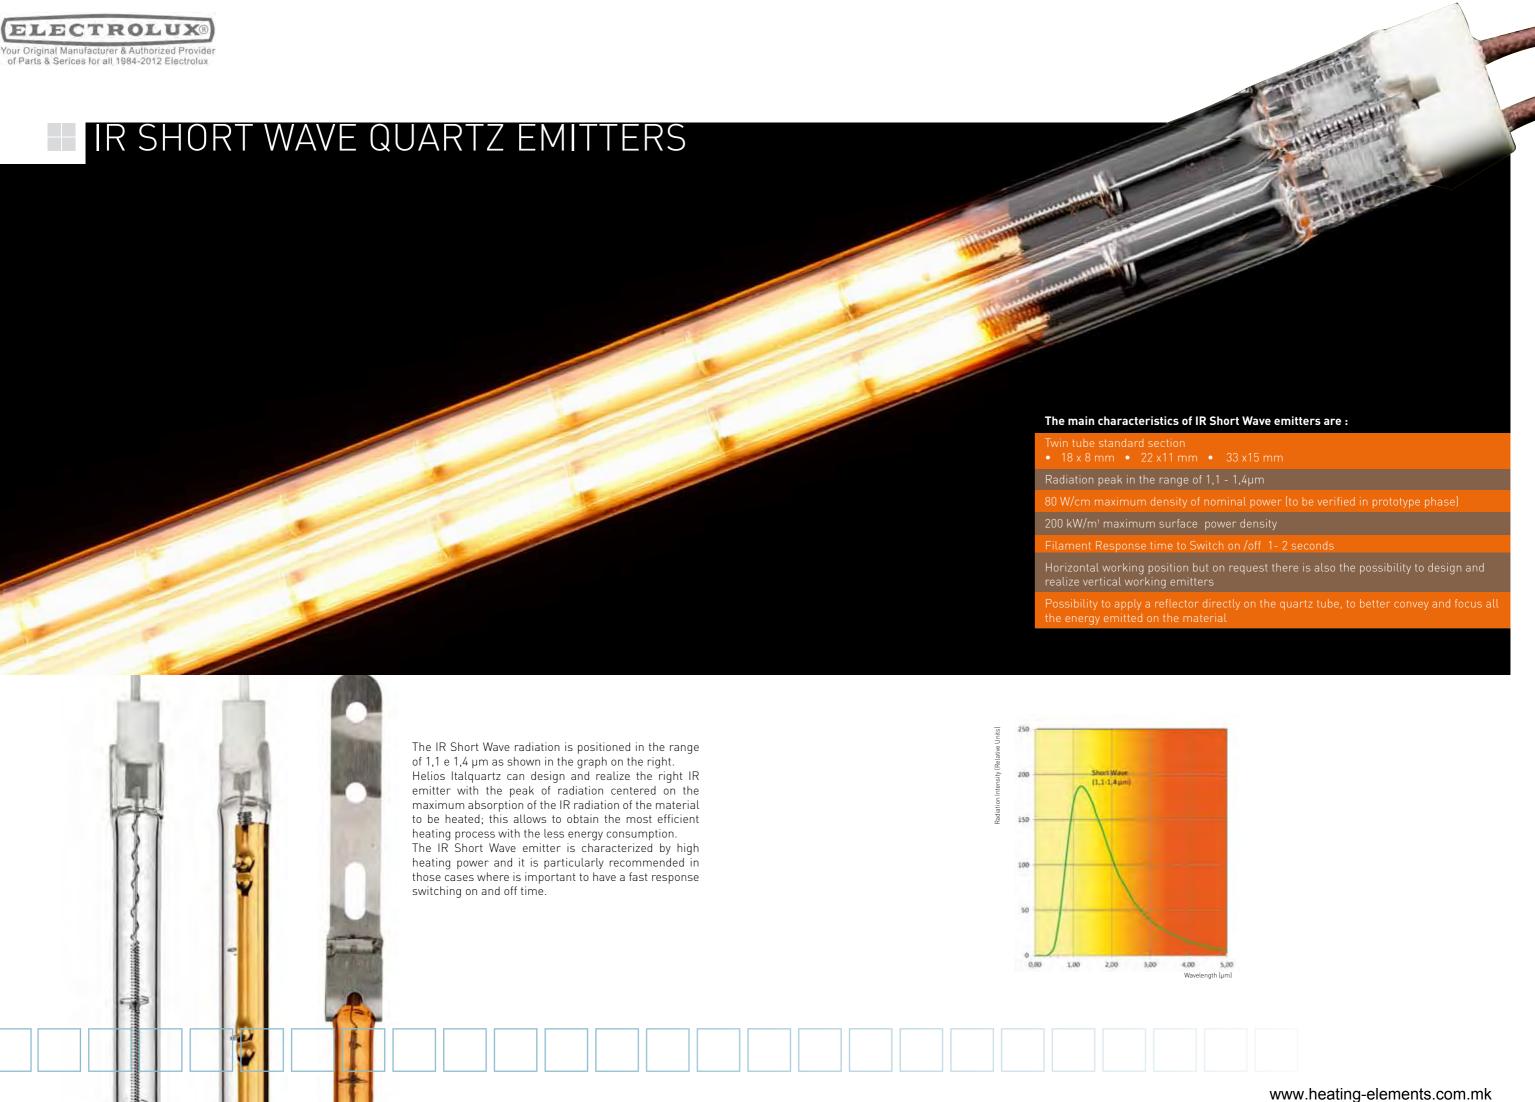

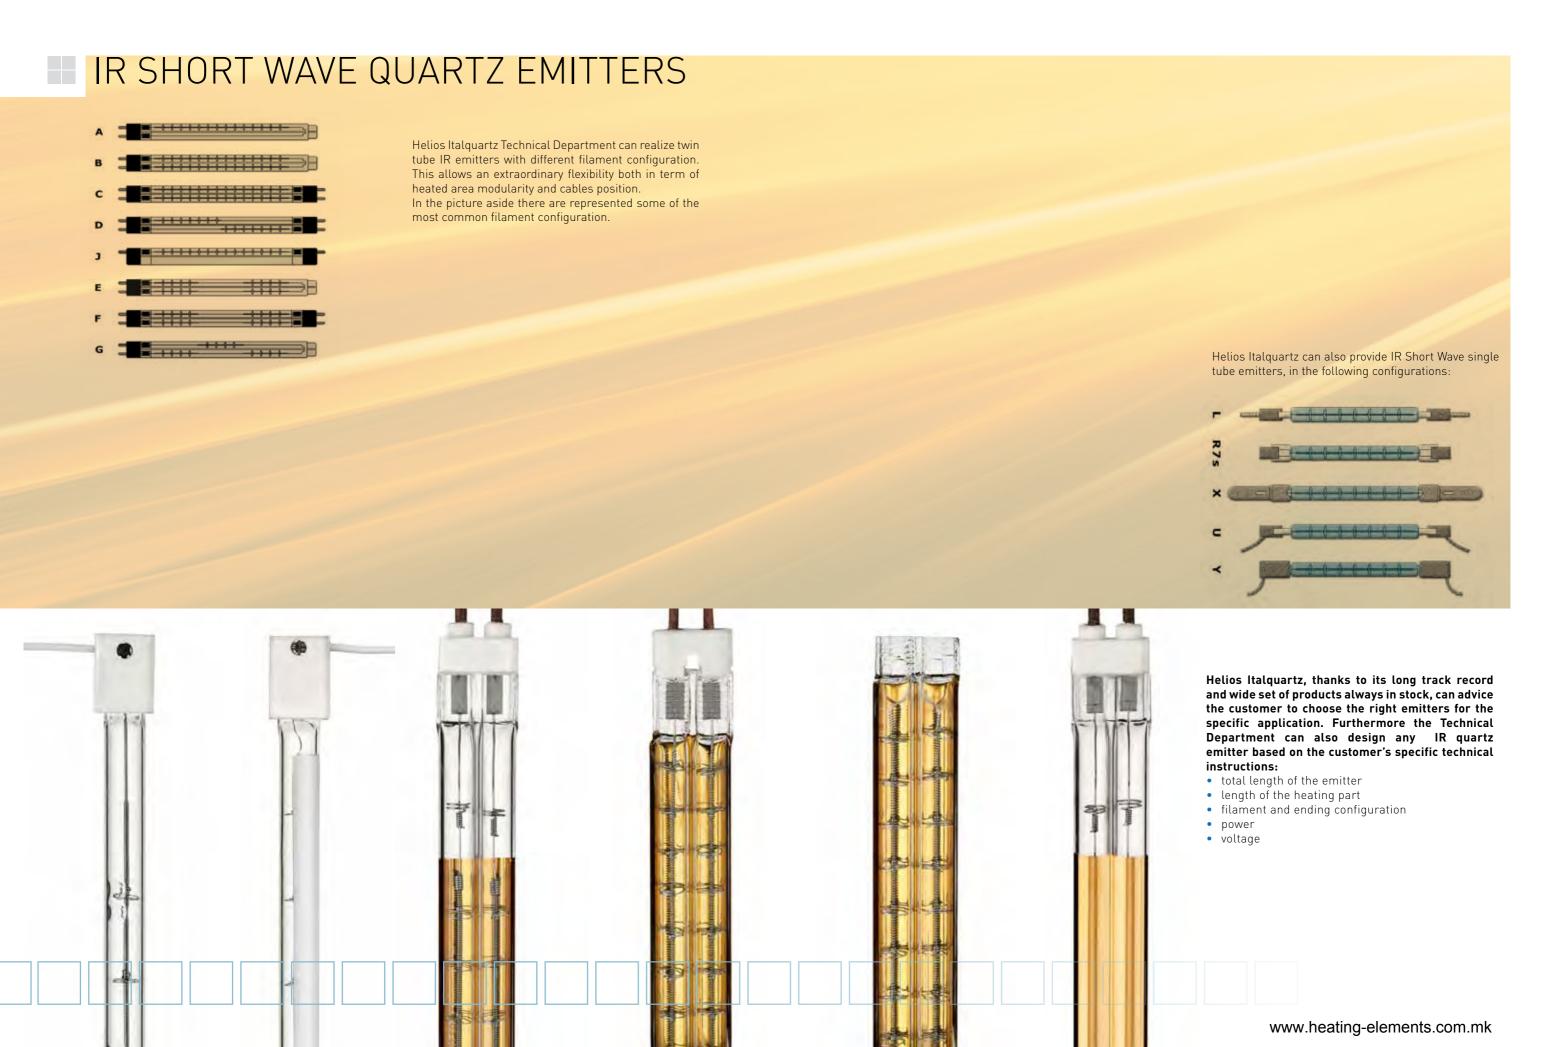



IR QUARTZ DIPPING HEATERS

Helios Italquartz, taking advantage from the physical properties of quartz glass such as high temperature resistance (>1100°C), excellent permeability for UV and IR radiation, total resistance to thermal shock phenomena (very low expansion coefficient) and perfect resistance to corrosive agents, produces special IR quartz dipping heater elements suitable for warming up liquids.

The IR quartz dipping heaters are made out of quartz glass tube closed on one side and with an insulated electrical connection on the other side.

Helios Italquartz produces its standard models with a heating length ranging from 200mm up to 1500mm and a power between 300W and 4000W.



IR Quartz Epiradiators, taking advantage of quartz glass transparency to IR radiation, its resistance to corrosive agents and to thermal shock, are widely used in laboratories and chemical factories.

They are composed by waterproof quartz glass chamber in which is fixed the IR filament that is electrically connected to the power supply through a practical perfectly insulated fused silica handle. They are normally used to evaporate liquid solutions. The peak of the IR emission is about 2.3µm and the energy is completely absorbed by the liquid surface that evaporates without boiling, leaving the remaining solution and the liquid container wall almost cold.

Our 500W Quartz Epiradiator placed 4cm over the liquid surface is able to evaporate about 400cc of water per hour.





Thanks to the great experience in the production of IR emitters and in the second working of quartz glass items, Helios Italquartz can design IR emitter with non linear shapes.

- Circular Shape
- Omega shape
- Oval shape
- Linear shape with ending part of the emitter coming out at 90° from the lamp body
- Special shape that follows the profile of the object need to be heated

Through the circular, omega and oval shape emitters it is possible to heat up a tubular object by using only one emitter; these type of heaters are particularly appreciated for several application in automotive industry , in the plastic heating application such as welding, bending and heating plastic parts.



PRODUCTS IDENTIFICATION

Helios Italquartz, a TUV ISO 9001 certified company, keeps record of all the information of every single batch of production, for this reason each emitter manufactured by Helios Italquartz is marked with an identification code placed over the tube (like in the following picture) that can guarantee the complete traceability of the product.



776-4062-7-74-50 0 0 7-330 - 119-051



| painting,varnishes and inks drying | heating PET for thermoforming | adhesive curing |
|---------------------------------------|--------------------------------|-----------------------------------|
| mirror silver paste drying | tile production | leather curing |
| glass bending and lamination | painting car bodyshells drying | fruit a and vegetable dehydrating |
| laminated glass cutting | deumidification | chocolate melting |
| PVB heating | mold drying | bottle sterilization |
| acoustic panel hardening | glass and ceramic serigraphy | textile fibre drying |
| printed circuit welding | rubber drying | capacitors plate drying |



CABLES

Helios Italquartz uses particular attention in the selection of all the components and materials involved in the production of its IR quartz emitters; the cable is a very important issue.

The standard emitters are provided with two kinds of cables that work up to 250°C or up to 400°C. On request it is also possible to equip the IR quartz emitters with special wire that can reach working temperature up to 700° C or up to 1100° C.

ACCESSORIES FOR INSTALLATIONS

Helios Italquartz always suggests to use, in combination with its IR emitters, special steel holders very helpful during the emitters fitting up process into the ovens. These special supports are specifically realized with a particular steel that can reach very high temperature (more than 1000°C), with a controlled dilation that keeps the memory of the original shape. In according to each particular case, Helios Italquartz Technical Department can introduce the right holder for the required IR lamp, advising and suggesting the costumers in the choice of the best assembly solution. The available holders, for twin tube emitters, are represented in the following pictures:



Lateral support with





